

FIRE - MOBILE
EF Johnson Summit 800 Mobile Radio
SWITCHING TO INTEROPS

To select you're new assigned Channel on your **800 Mobile Radio**

1. Push in on the " Select " Knob; the bar above the " **GRP** " number will now be over the " **SYS** " number. Turn to your channel needed. The bar will reset to over the group. If you delay the bar will reset you will have to start over by pressing the select button then turning.

To select you're new assigned Zone Channel East to West etc. on your **800 Mobile Radio**.

1. Press on the "BANK" button on the mobile, turn the selector switch to your assigned zone. East Central or West

2. Press in on the selector the word "ON" will appear between the system and group number.. Let the unit adjust briefly.

3. Push in on the " Select " Knob, the bar above the " **GRP** " number will now be over the " **SYS** " number. Turn to your channel needed. The bar will reset to over the group. If you delay the bar will reset you will have to start over by pressing the select button then turning.

FIRE / EMS - PORTABLE
EF Johnson Viking Portable Radio
SWITCHING Channels

To select a new assigned Channel on your 800 Viking Portable if not already on a selector position.

1. Turn your portable selector to Position 14 or 15 which ever one does not display "QLK" (make sure "IN SCAN" does not appear on display) if it does push "SCN" to turn off System scan.

2. Push the "S" button to change systems

3. Push the "G" button to change groups

To lock this Channel on your portable: (this must be done)

4. Push the "RTN" Button then the "SCN" Button (If you get "IN SCAN" you must take scan ("SCN") Off and retry it)

5. Change selector to either Position 13 or 15 then back to position 14 or 15, the new channel is now locked in.